

# Nokia Asha 308

RM-838, RM-852

25.09.2012

v1.0



## IMPORTANT

This document is intended for use by authorized Nokia service centers only. Please use the document together with other documents such as the Service Manual and Service Bulletins.

## Version information


While every effort has been made to ensure that the document is accurate, some errors may exist. Please always check for the latest published version for this document.

If you find any errors in the document please send email to: [service.manuals@nokia.com](mailto:service.manuals@nokia.com)


1.0 First approved version.


## Contents

- 1 Front page
- 2 X-GOLD, Display, Touch interface, UI-keys, Camera, Dual SIM Easy swap, Battery, MMC, HS USB
- 3 X-GOLD, Charging, Memory, Backlight, Accelerometer
- 4 X-GOLD, RF part
- 5 X-GOLD, Audio
- 6 Component finder top
- 7 Component finder bottom

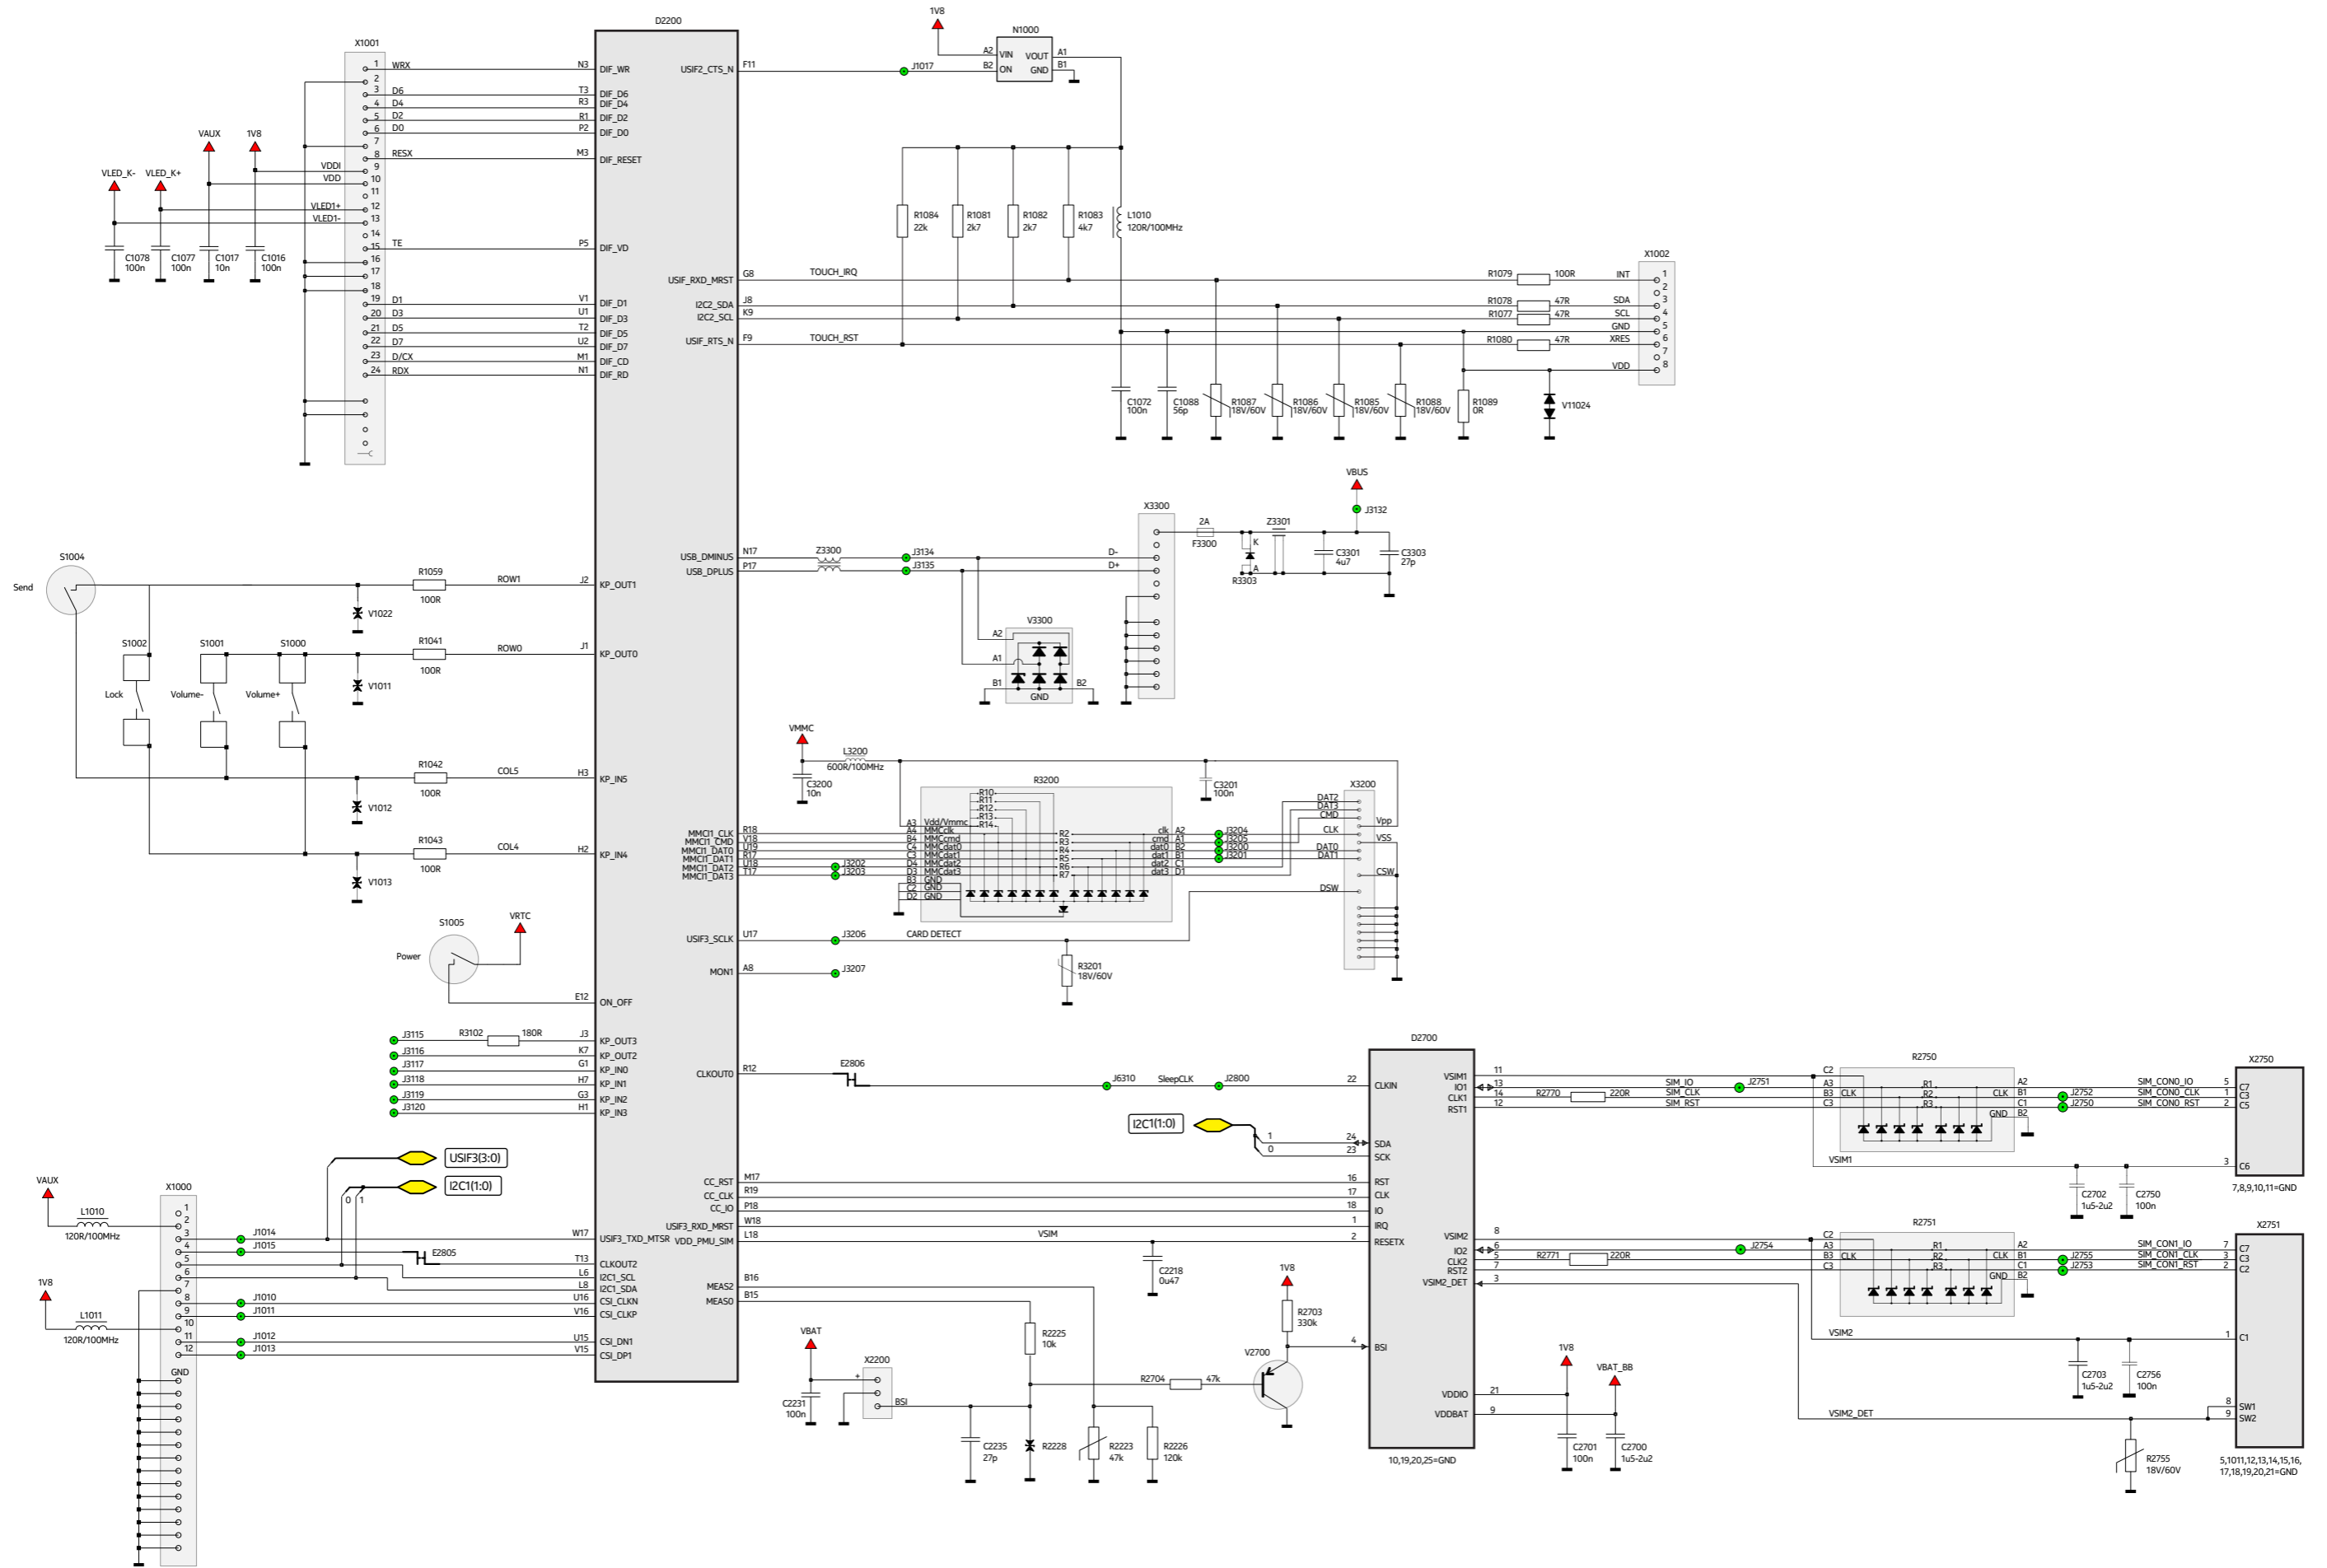




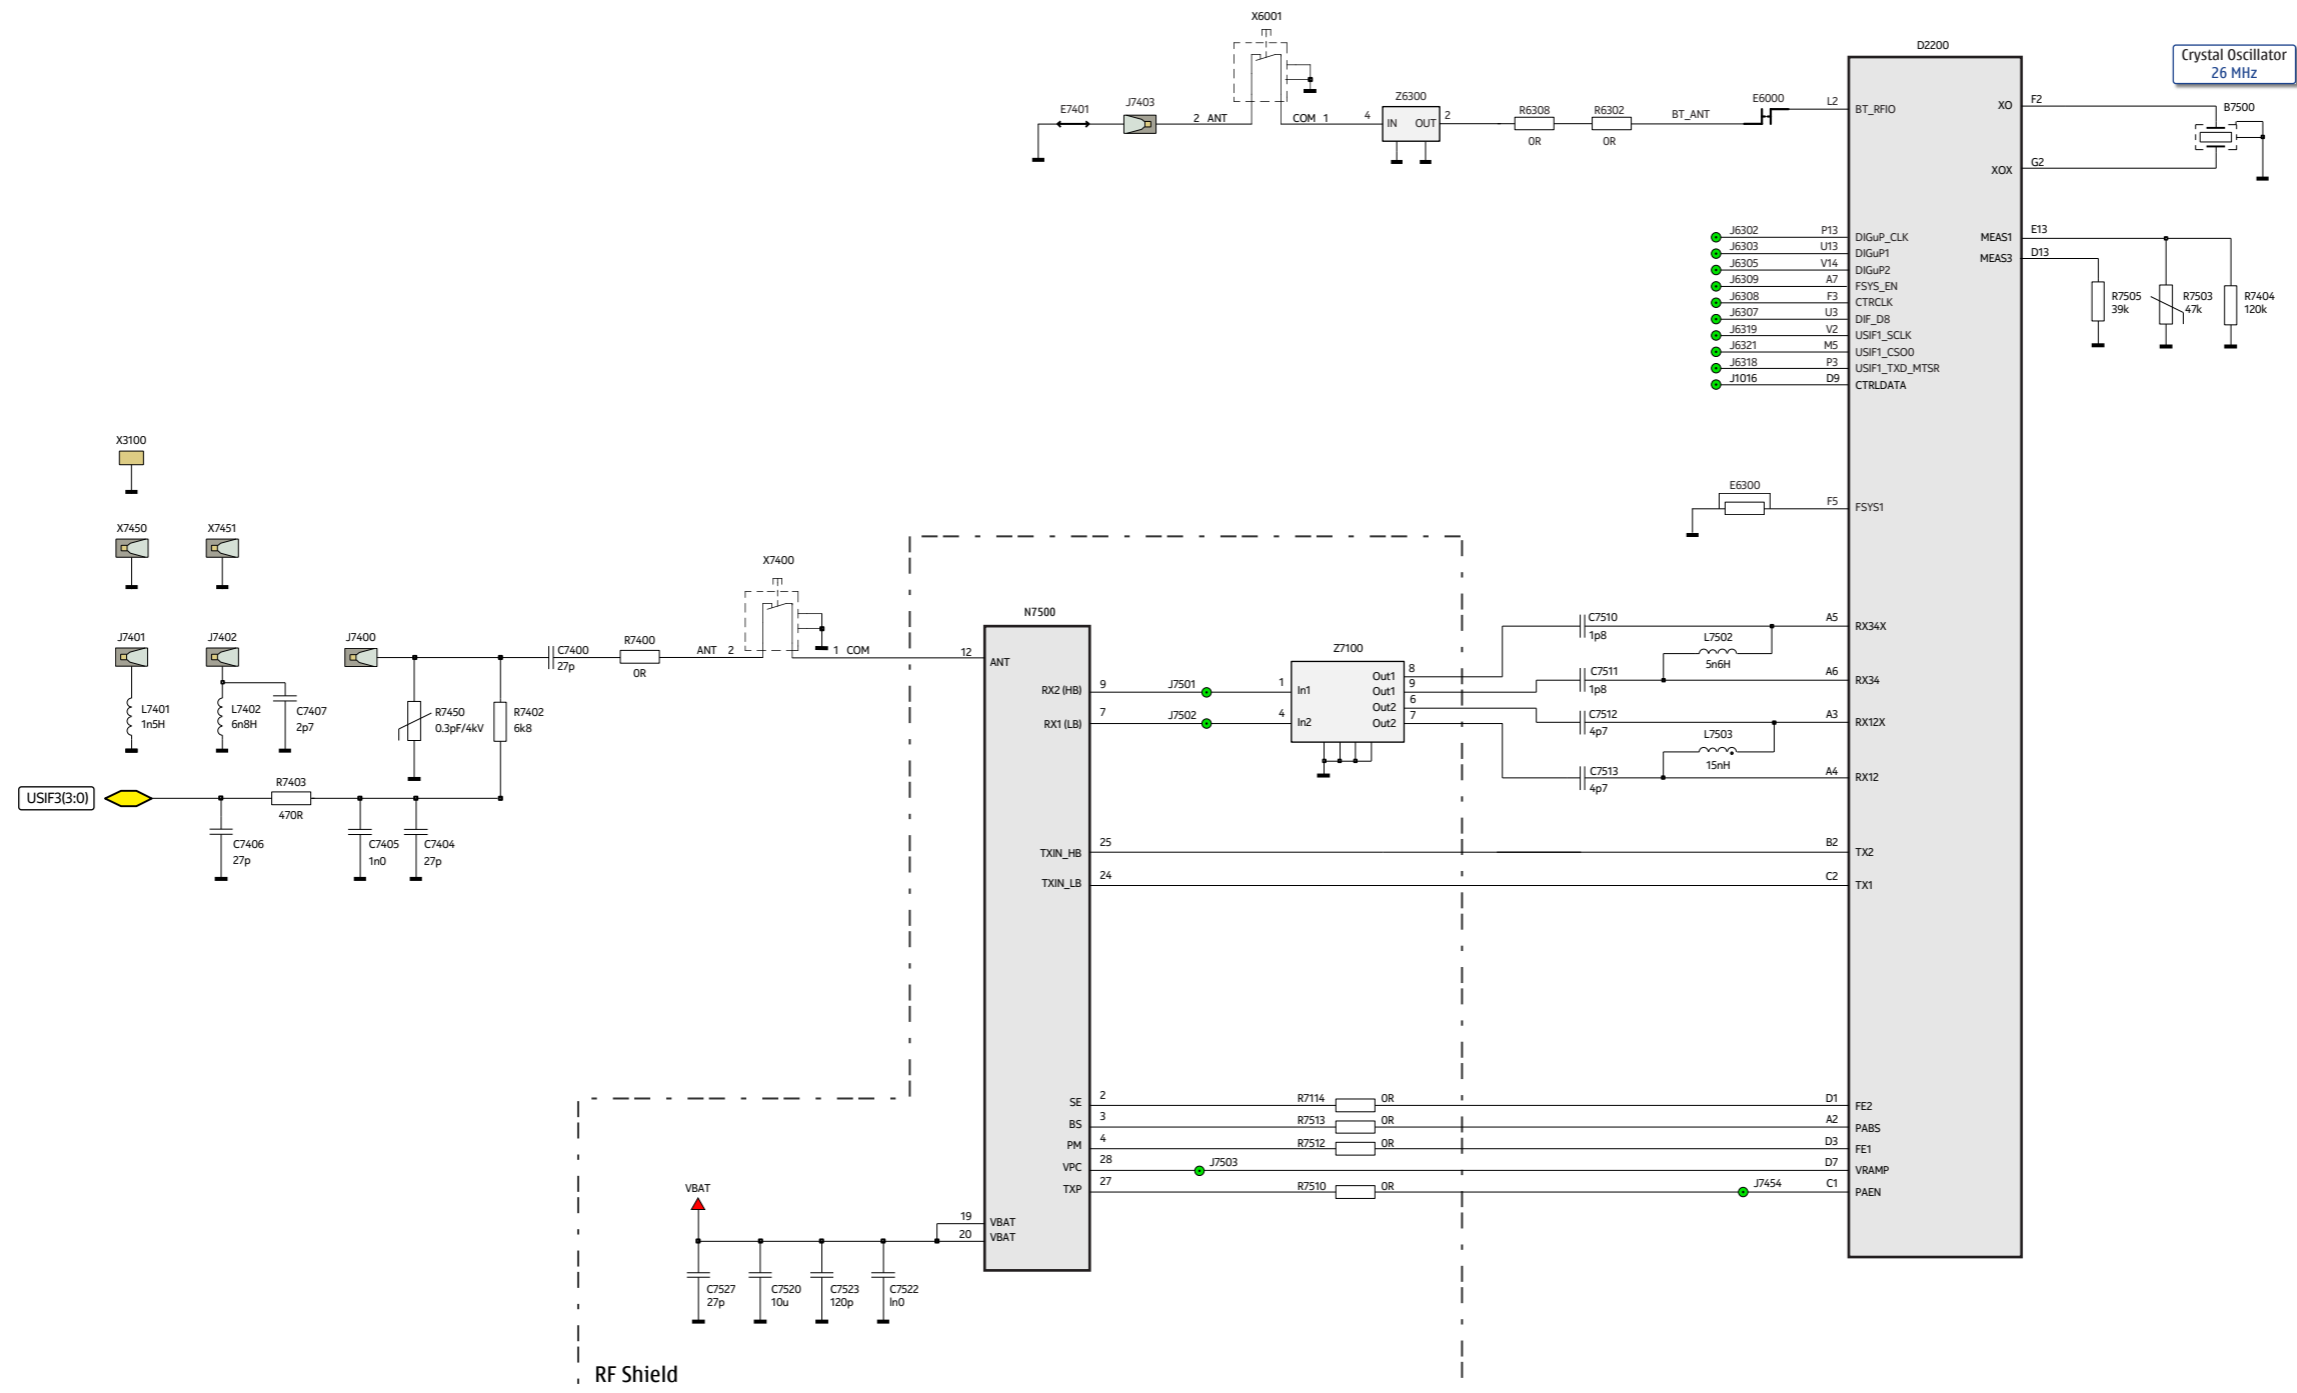

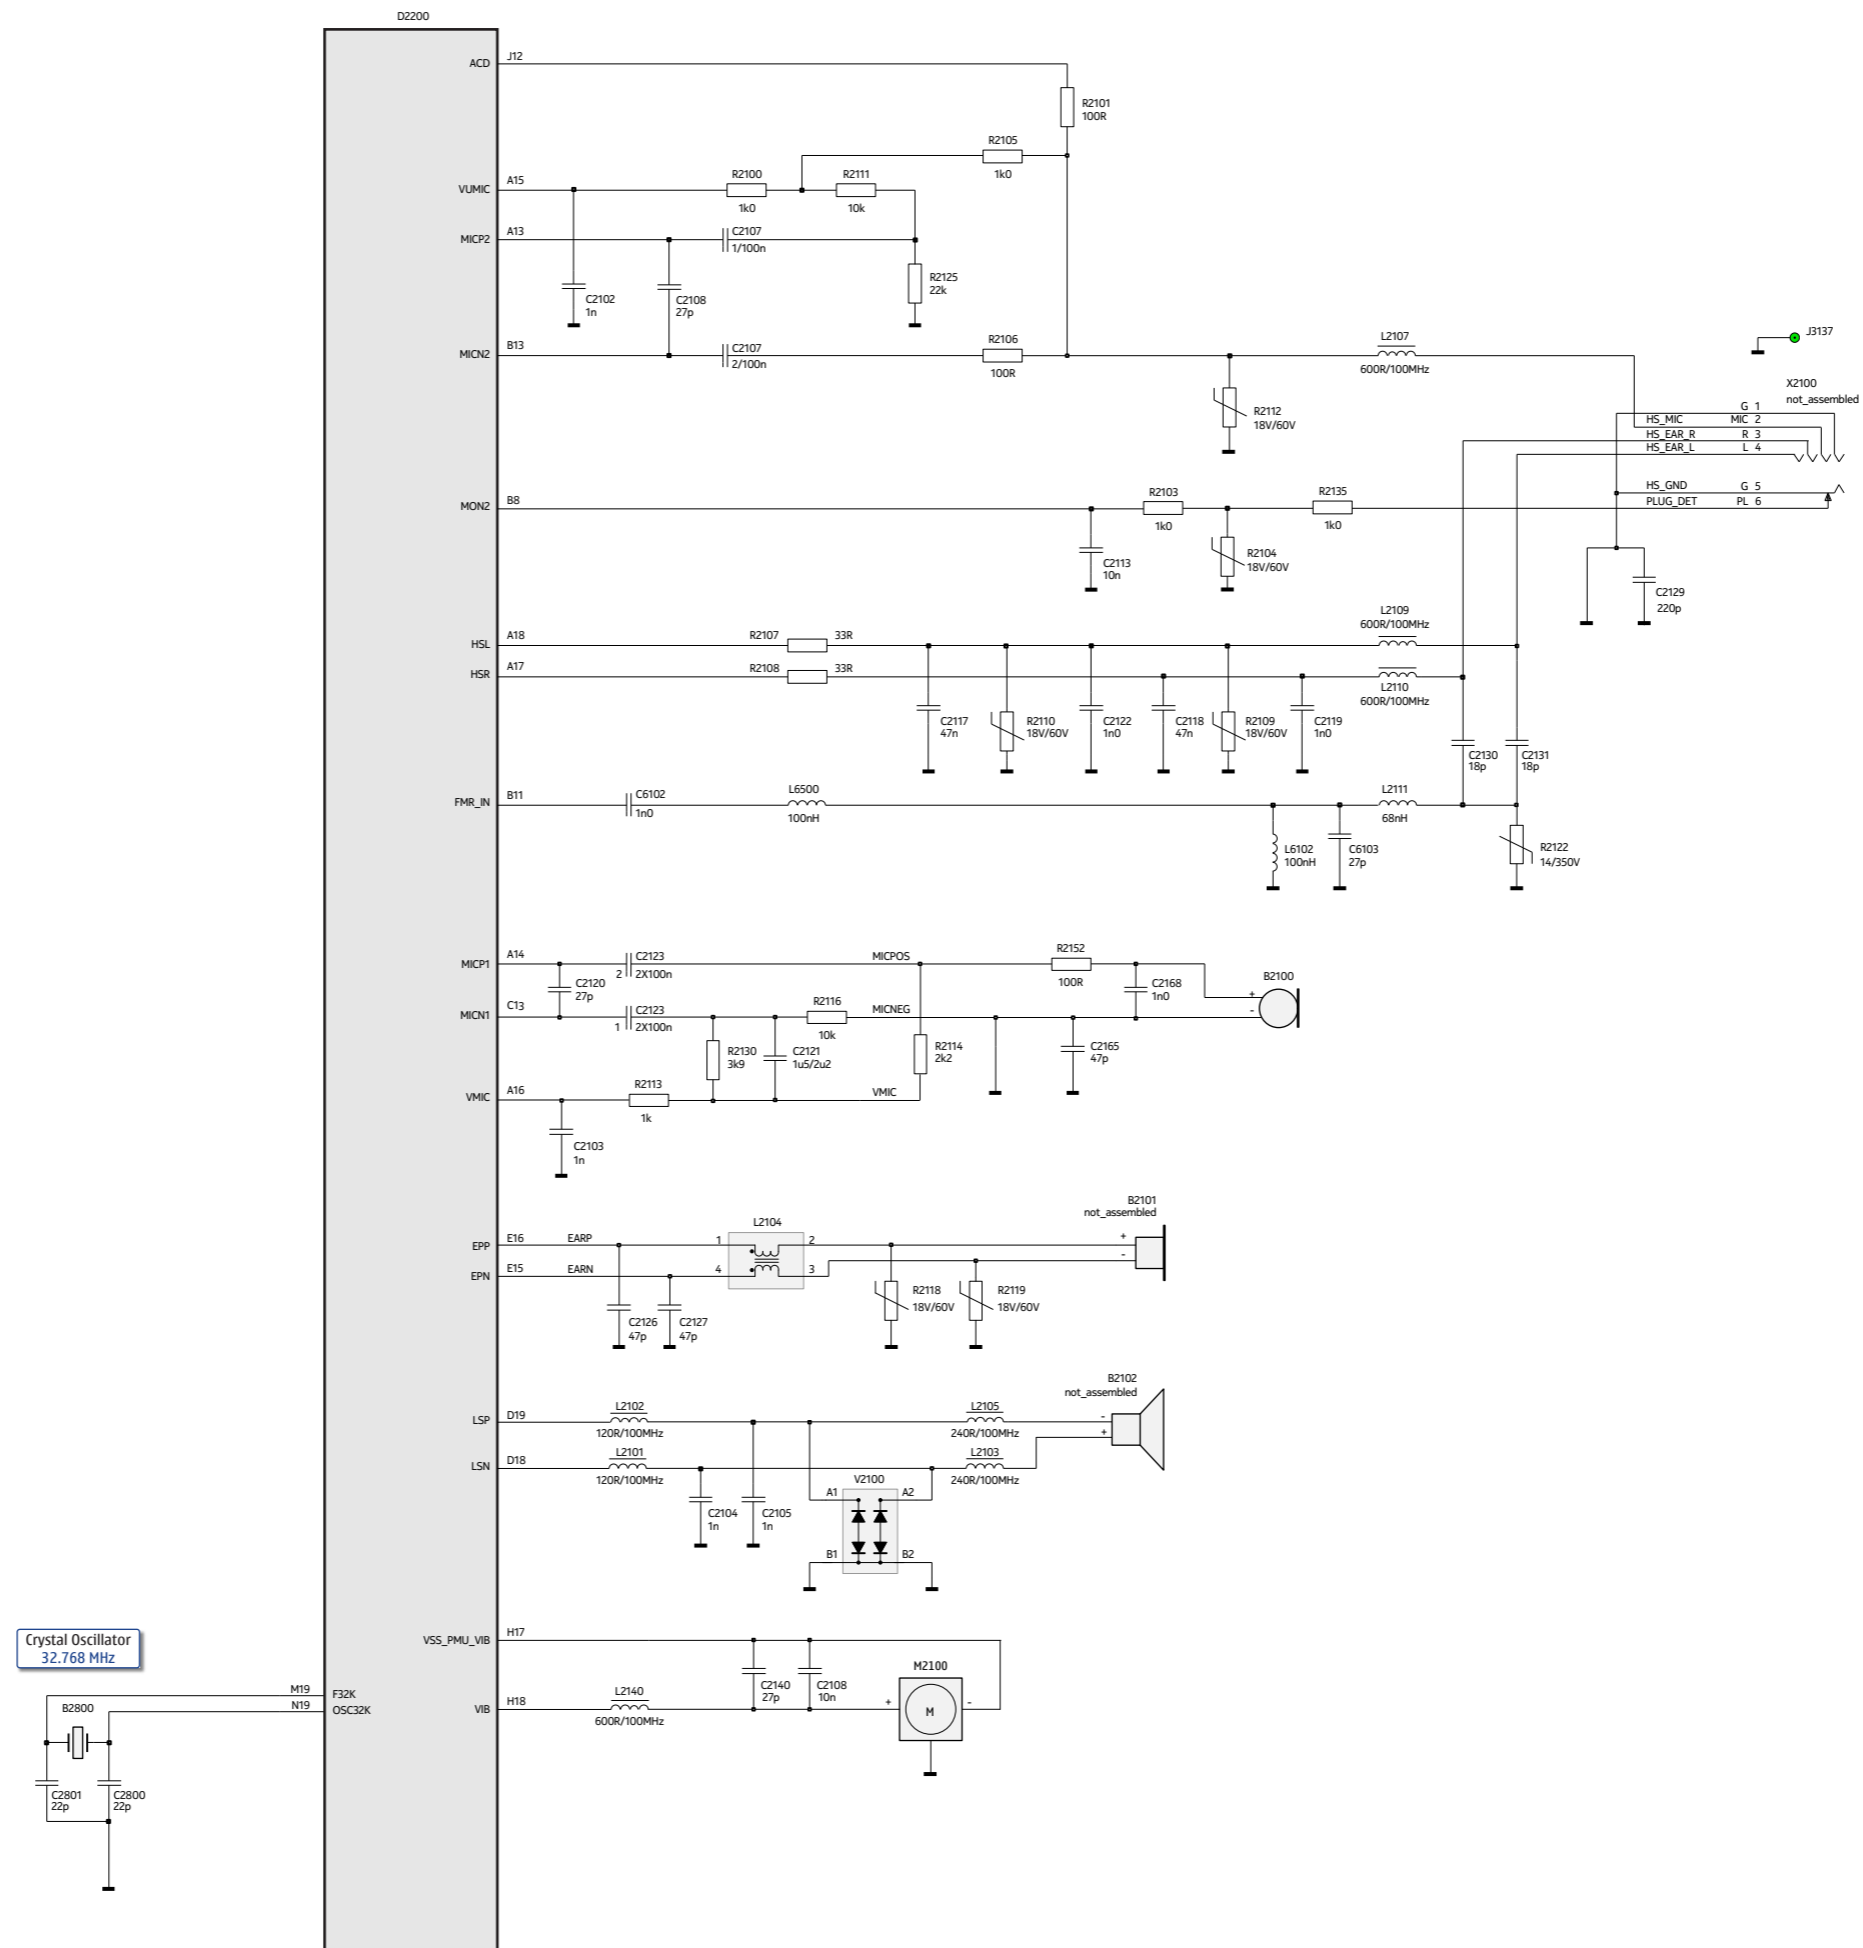



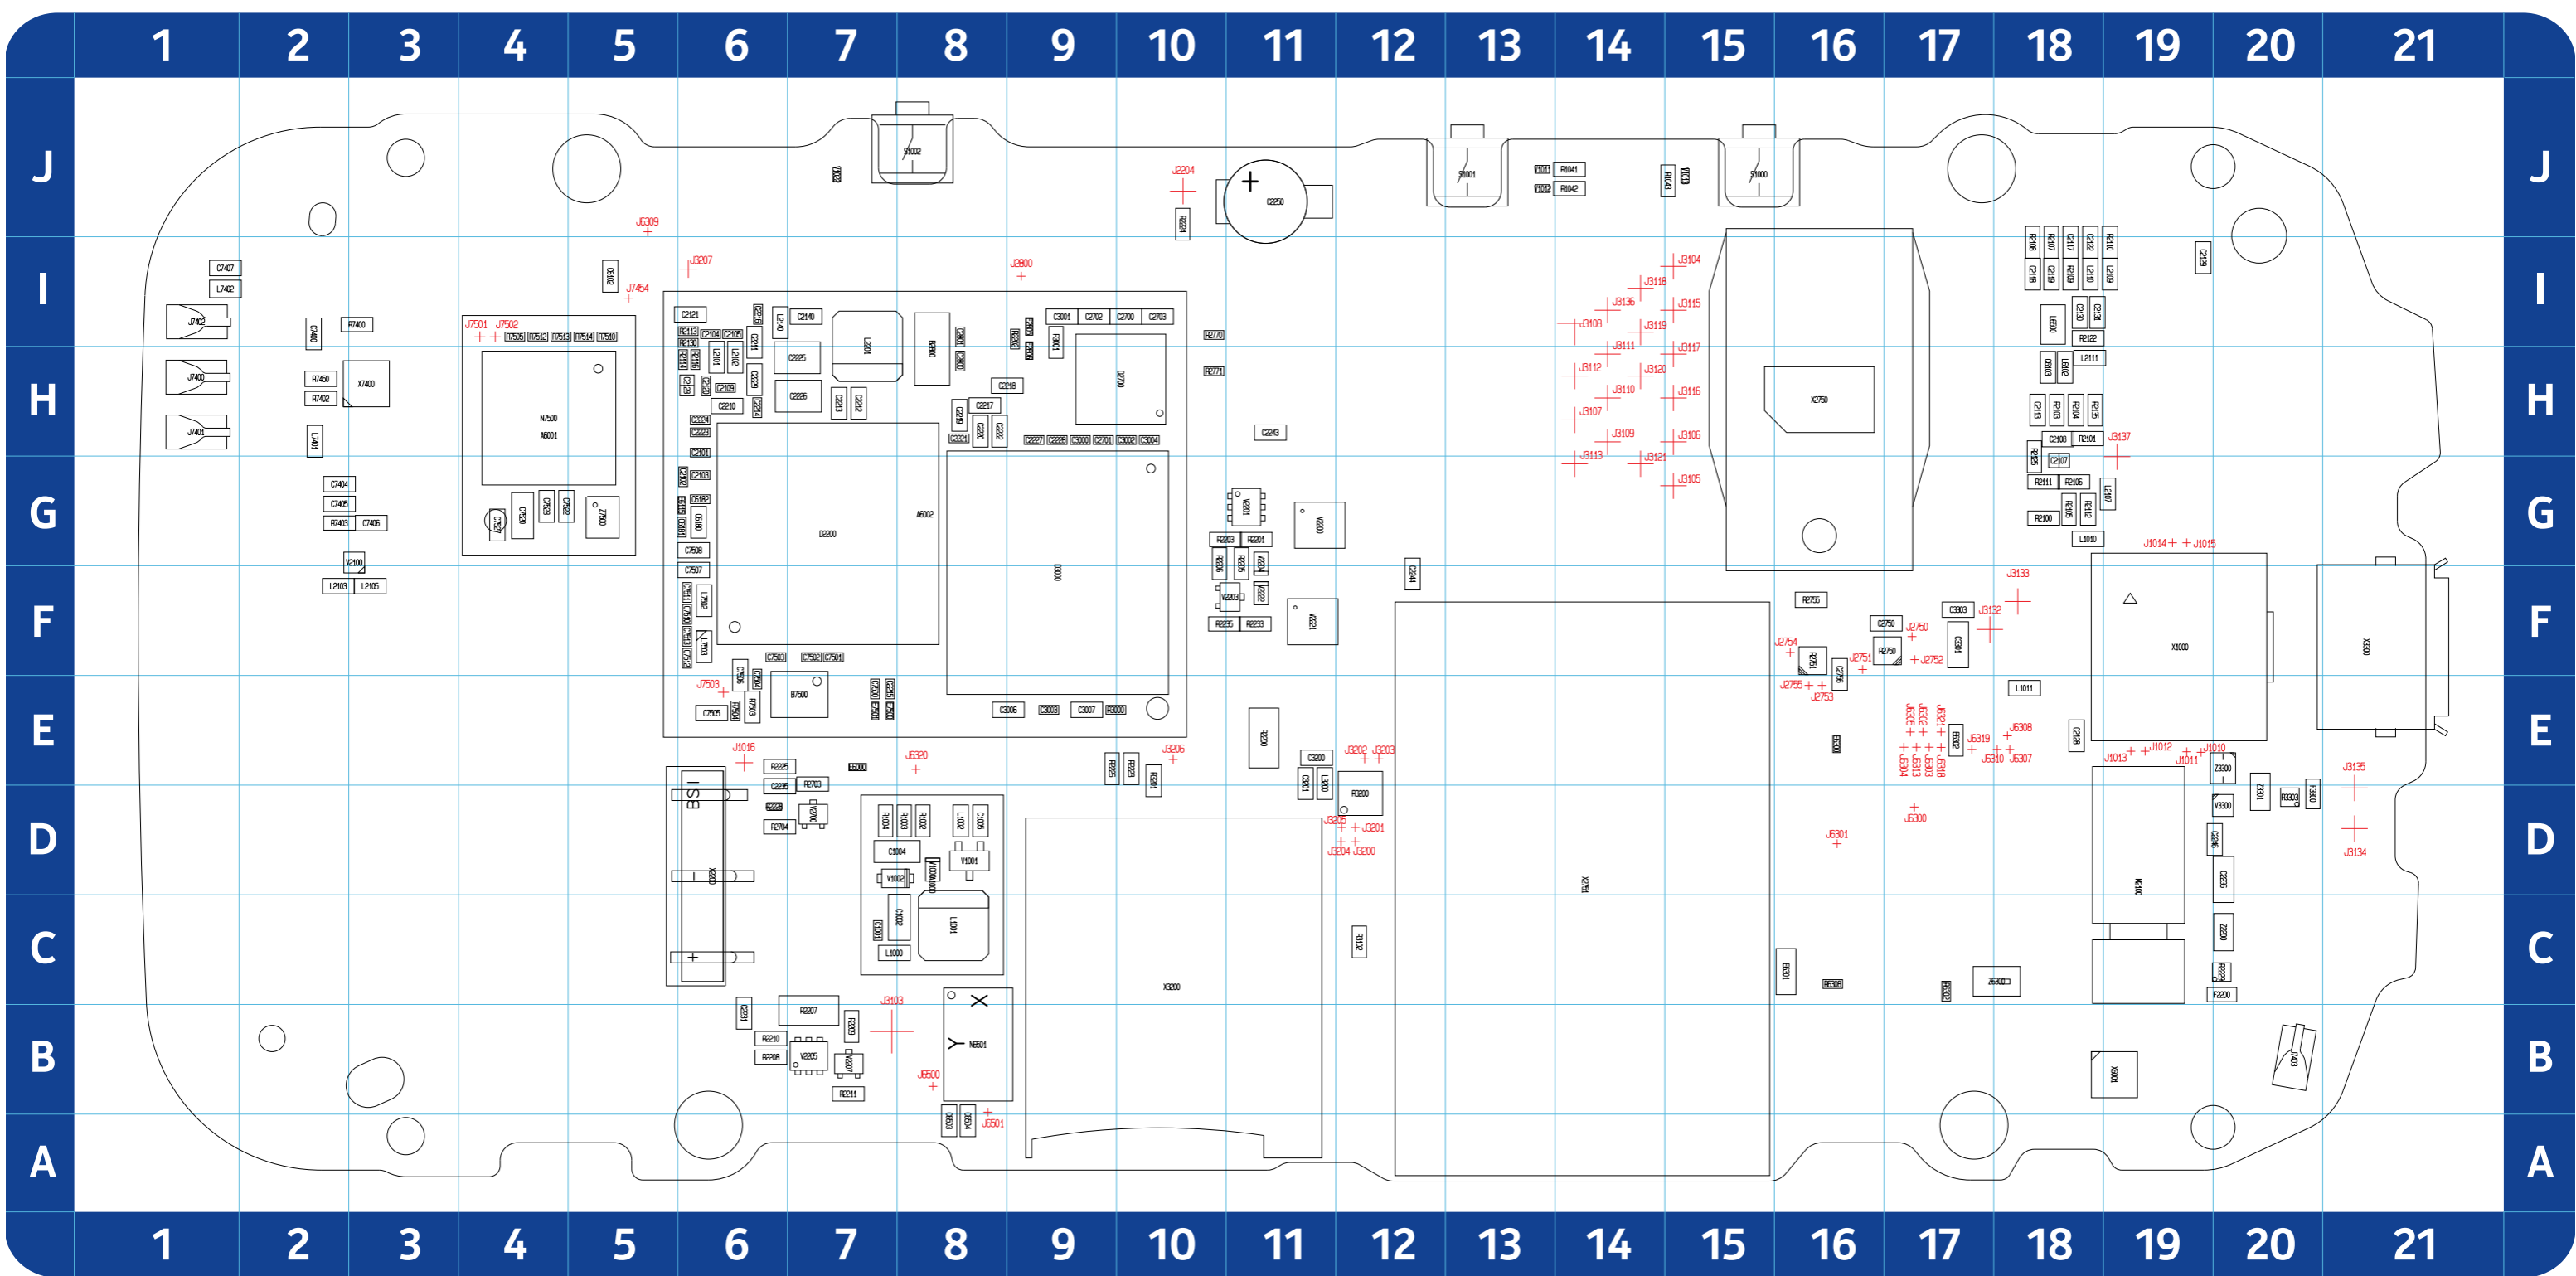

<b>B</b>	C2107	G18	C2130	I18	C2220	H8	C2243	H11	C3001	I9	C6181	G6	C7504	E6	<b>D</b>	E6302	E17	L2101	H6	L7401	H2	R1041	J14	R2111	G18	R2205	G11	R2233	F11	R3201	E10	R7513	I4	V1022	J7	X1000	F19	Z2204	E11		
B2800	H8	C2108	H18	C2131	I18	C2221	H8	C2244	F12	C3002	H10	C6182	G6	C7505	E6	D2200	G7	E7401	B20	L2102	H6	L7402	I1	R1042	J14	R2112	G18	R2206	G10	R2235	F10	R3303	D20	R7514	I5	V2100	G3	X2200	D6	Z2206	H7
B7500	E7	C2109	H6	C2140	I7	C2222	H8	C2246	D20	C3003	E9	C6503	A8	C7506	F6	D2700	H10	E7500	E7	L2103	F2	L7502	F6	R1043	J15	R2113	I6	R2207	B7	R2703	E7	R6302	C17	<b>S</b>	V2200	G11	X2750	H16	Z2207	H6	
<b>C</b>	C2113	H18	C2210	H6	C2223	H6	C2250	J11	C3004	H10	C6504	A8	C7507	F6	D3000	F9	E7501	E7	L2105	F3	L7503	F6	R2100	G18	R2114	H6	R2208	B6	R2704	D6	R6308	C16	S1000	J15	V2201	G11	X2751	C14	Z2208	H9	
C1001	C7	C2117	I18	C2211	I6	C2224	H6	C2700	I10	C3006	E9	C7400	I2	C7508	G6	<b>E</b>	<b>F</b>	L2107	G19	<b>M</b>	R2101	H18	R2116	H6	R2209	B7	R2750	F17	R7400	I3	S1001	J13	V2203	F11	X3200	C10	Z2800	H7			
C1002	C8	C2118	I18	C2212	H7	C2225	H7	C2701	H9	C3007	E9	C7404	G2	C7510	F6	E1000	D7	F2200	C20	L2109	I19	M2100	D19	R2103	H18	R2122	I18	R2210	B6	R2751	F16	R7402	H2	S1002	J8	V2204	G11	X3300	F21	Z3300	E20
C1004	D8	C2119	I18	C2213	H7	C2226	H7	C2702	I9	C3200	E11	C7405	G2	C7511	F6	E2000	I19	F3300	D20	L2110	I18	<b>N</b>	R2104	H18	R2125	G18	R2211	B7	R2755	F16	R7403	G2	<b>V</b>	V2205	B7	X6001	B19	Z3301	D20		
C1005	D8	C2120	H6	C2214	H6	C2227	H9	C2703	I10	C3201	E11	C7406	G3	C7512	F6	E2805	I9	<b>L</b>	L2111	H18	N6501	B8	R2105	G18	R2130	I6	R2223	E10	R2770	I10	R7450	H2	V1000	D8	V2207	B7	X7400	H3	Z6300	C18	
C2101	H6	C2121	I6	C2215	E7	C2228	H9	C2750	F17	C3301	F17	C7407	I1	C7513	F6	E2806	H9	L1000	C7	L2140	I6	N7500	H4	R2106	G18	R2135	H18	R2224	J10	R2771	H10	R7503	E6	V1001	D8	V2221	F11	<b>Z</b>	Z7500	G5	
C2102	G6	C2122	I18	C2216	I6	C2229	H6	C2756	F16	C3303	F17	C7500	E7	C7520	G4	E6000	E7	L1001	C8	L2201	I7	<b>R</b>	R2107	I18	R2200	E11	R2225	E6	R3000	E9	R7504	E6	V1002	D7	V2222	F11	Z2117	H6			
C2103	G6	C2123	H6	C2217	H8	C2231	B6	C2800	H8	C6102	I5	C7501	F7	C7522	G4	E6115	G6	L1002	D8	L3200	E11	R1002	D8	R2108	I18	R2201	G11	R2226	E9	R3001	I9	R7505	I4	V1011	J13	V2700	D7	Z2200	C20		
C2104	I6	C2128	E18	C2218	H9	C2235	D6	C2801	I8	C6103	H18	C7502	F7	C7523	G4	E6300	E16	L1010	G18	L6102	H18	R1003	D8	R2109	I18	R2202	I9	R2228	D6	R3102	C12	R7510	I5	V1012	J13	V3300	D20	Z2201	G7		
C2105	I6	C2129	I19	C2219	H8	C2236	D20	C3000	H9	C6180	G6	C7503	F6	C7527	G4	E6301	C16	L1011	E18	L6500	I18	R1004	D7	R2110	I19	R2203	G10	R2229	C20	R3200	D12	R7512	I4	V1013	J15	<b>X</b>	Z2203	H7			